


DRAIN AND RINSE



1 Defrost
Press RESET, then Press and Hold STANDBY for 3 Seconds

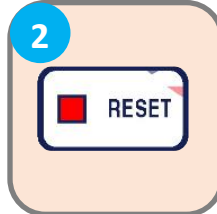

2 When Defrost Completed Press RESET




3 Remove Hopper Agitators, then Press Wash



4 Drain Product then Press RESET



5 Add 8 Liters (2.11 Gallons) Water to Hoppers

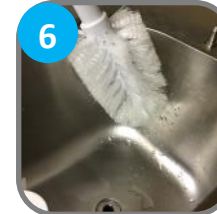

6 Scrub Sides & Bottom of Hoppers



7 Press Wash Drain Water Press RESET



8 Repeat Steps 5-7 Until Water is Clear

DISASSEMBLE & CLEAN



1 Switch to OFF
RELEASE PRESSURE IN CYLINDER by Pulling Down on Dispensing Handles OR Pulling up on Prime Plug



2 Disconnect Feed Tube



3 Remove & Disassemble Feed Tube



4 Turn & Disconnect Air Pump



5 Turn & Disconnect Suction Tube



6 Remove Air Pump Hand Nuts



7 Remove Seal & Pump Gears



8 Remove Dispensing Door Nuts (Diagonally)



9 Remove Dispensing Door Assembly



10 Remove Door Gaskets & Front Bearings



11 Remove Prime Plugs



12 Remove Handle Retention Nut & Pin



13 Remove Dispensing Handles & Draw Valves



14 Remove O-Rings from Draw Valves & Prime Plugs



15 Remove Star Caps



16 Remove Beater Assembly



17 Remove Scraper Blades & Separate from Scraper Clips



18 Remove Beater Shoes




19 Remove Drive Shaft & Seal



20 Remove and Clean (Front & Internal) Drip Tray



21 Scrub Cylinders w/ Large Brush

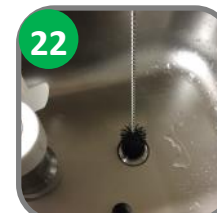

22 Scrub Hopper Feed Hole & Agitator



23 Scrub Prime Plug Ports w/ Brush



24 Wash All Parts Thoroughly

ASSEMBLE



1 Install Drive Shaft Seal, Lubricate Drive Shaft & End of Seal (Shaded Area)



2 Install Drive Shaft into Cylinder, Rotate to Lock in Place



3 Install Beater Shoes



4 Install Beater Blades into Beater Clips



5 Assemble & Install Beater Assembly Rotate to Lock in Place (Beater Fully Inside)



6 Install & Lubricate Draw Valves & Prime Seals



7 Install Prime Plugs



8 Install Draw Valves



9 Install Dispensing Handles



10 Install Handle Retention Pin & Nut



11 Install Star Caps



12 Install Door Gaskets and Front Bearings



13 Install Dispensing Door Assembly



14 Install Dispensing Door Nuts (Diagonally)



15 Install Gears & Seal Lubricate Seal Lightly



16 Install Pump Cover & Hand Nuts



17 Install Suction Tube with Spring and Plug



18 Install Air Pump Assembly (DO NOT INSTALL FEED TUBE)



19 Lubricate & Install Hopper Agitators



20 Install Internal & Front Drip Tray

SANITIZE AND ADD PRODUCT



1 Mix 8 Liters (2.11 Gallons) Sanitizer Solution, Pour in Hopper




2 Press RESET then Press WASH



3 Wait 5 to 10 Minutes



4 Drain Sanitizer Solution

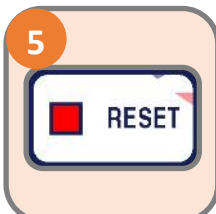

5 Press RESET



6 Add 1 Liter (0.26 Gallons) Product & Purge Sanitizer



7 Pour in Remaining Product into Hoppers



8 Open Prime Plug Until Product Flows Out from Bottom Prime Port



9 Press WASH to Prime Air Pump, Make Sure Product Pumps Out Strong, then Press RESET



10 Assemble, Sanitize & Install Feed Tube



11 Install Hopper Lids



12 Press FREEZE